
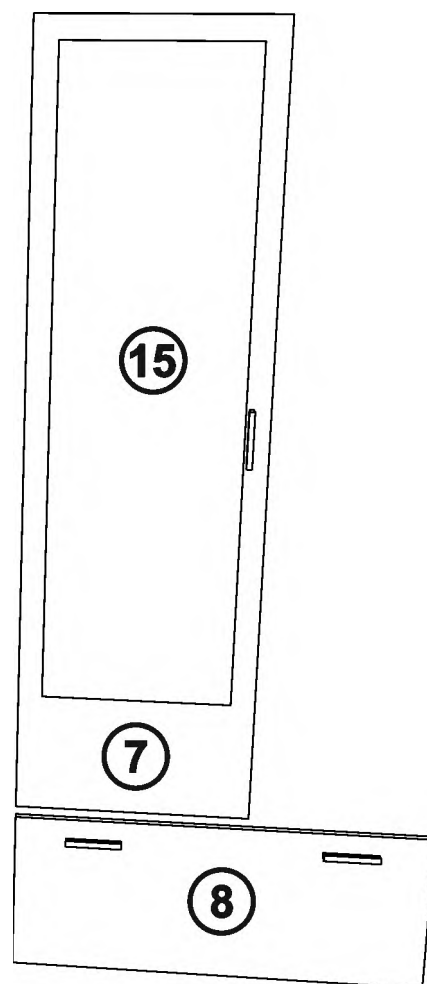
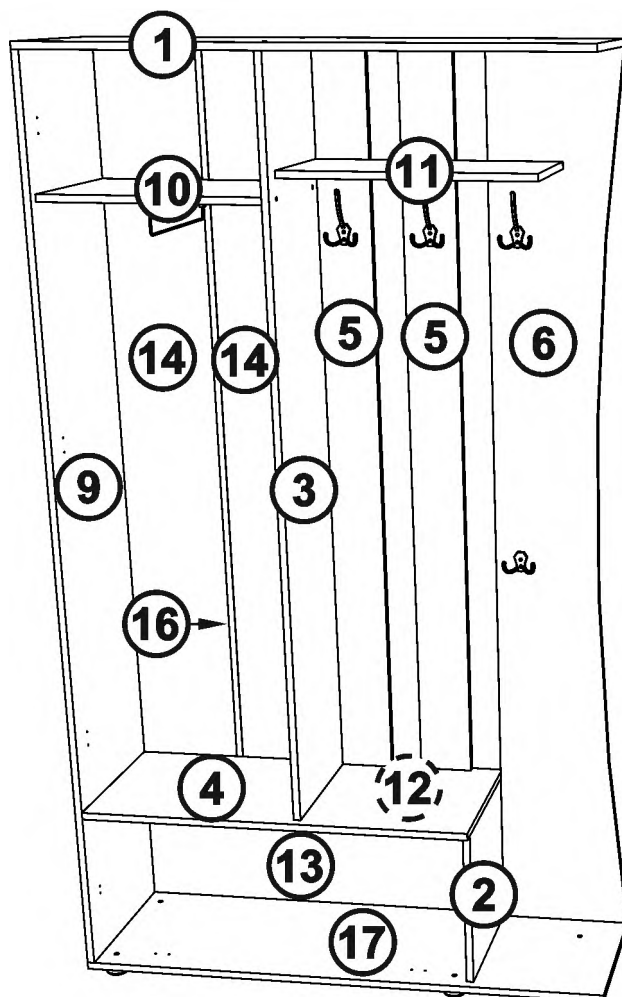














Передпокій Авео-2

Hallway Set Aveo-2


(1201x385x2100)

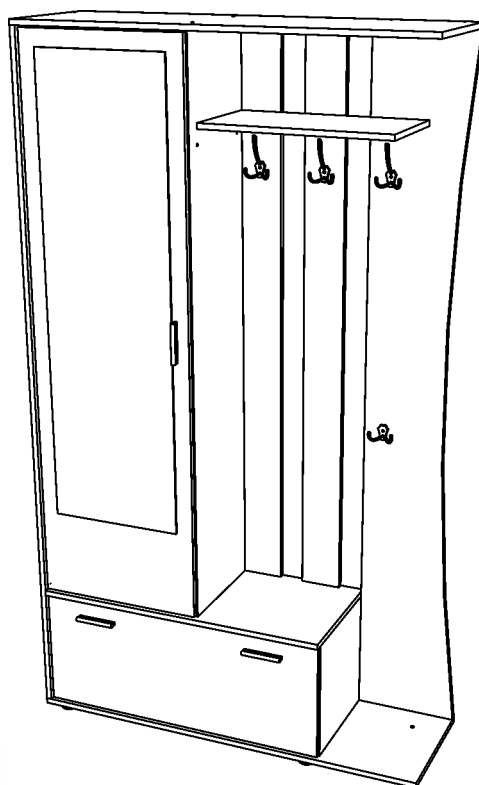


- | | | |
|---------------|---------------|---------------|
| ① 1201x380- 1 | ⑦ 1657x493- 1 | ⑬ 895x270- 1 |
| ② 356x356- 1 | ⑧ 349x879- 1 | ⑭ 1696x253- 2 |
| ③ 1666x356- 1 | ⑨ 2038x380- 1 | ⑮ 1500x370- 1 |
| ④ 885x380- 1 | ⑩ 484x356- 1 | ⑯ 1696mm- 1 |
| ⑤ 1666x121- 2 | ⑪ 550x293- 1 | ⑰ 1201x380- 1 |
| ⑥ 2038x300- 1 | ⑫ 867x120- 1 | |

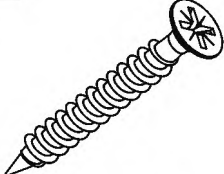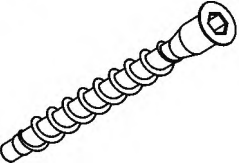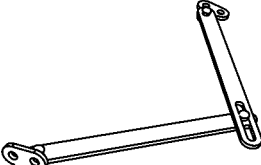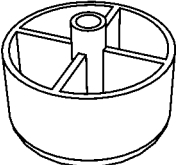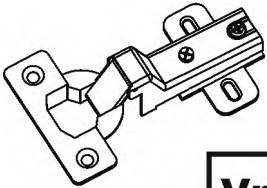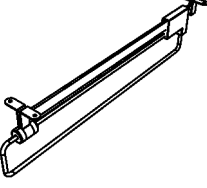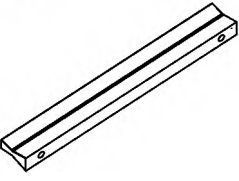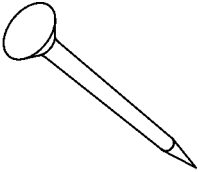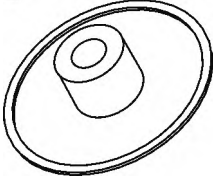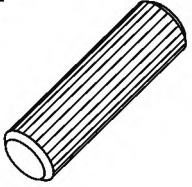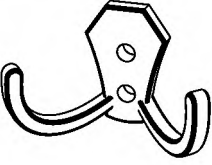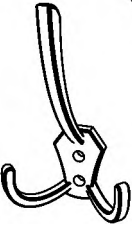1  35 x 3,5x16	2  6 x 4x30	3  33 x	4  2 x	5  5 x
6  5 x Vn	7  1 x 350mm	8  3 x	9  60 x	10  10 x
11  2 x	12  1 x	13  3 x		

1

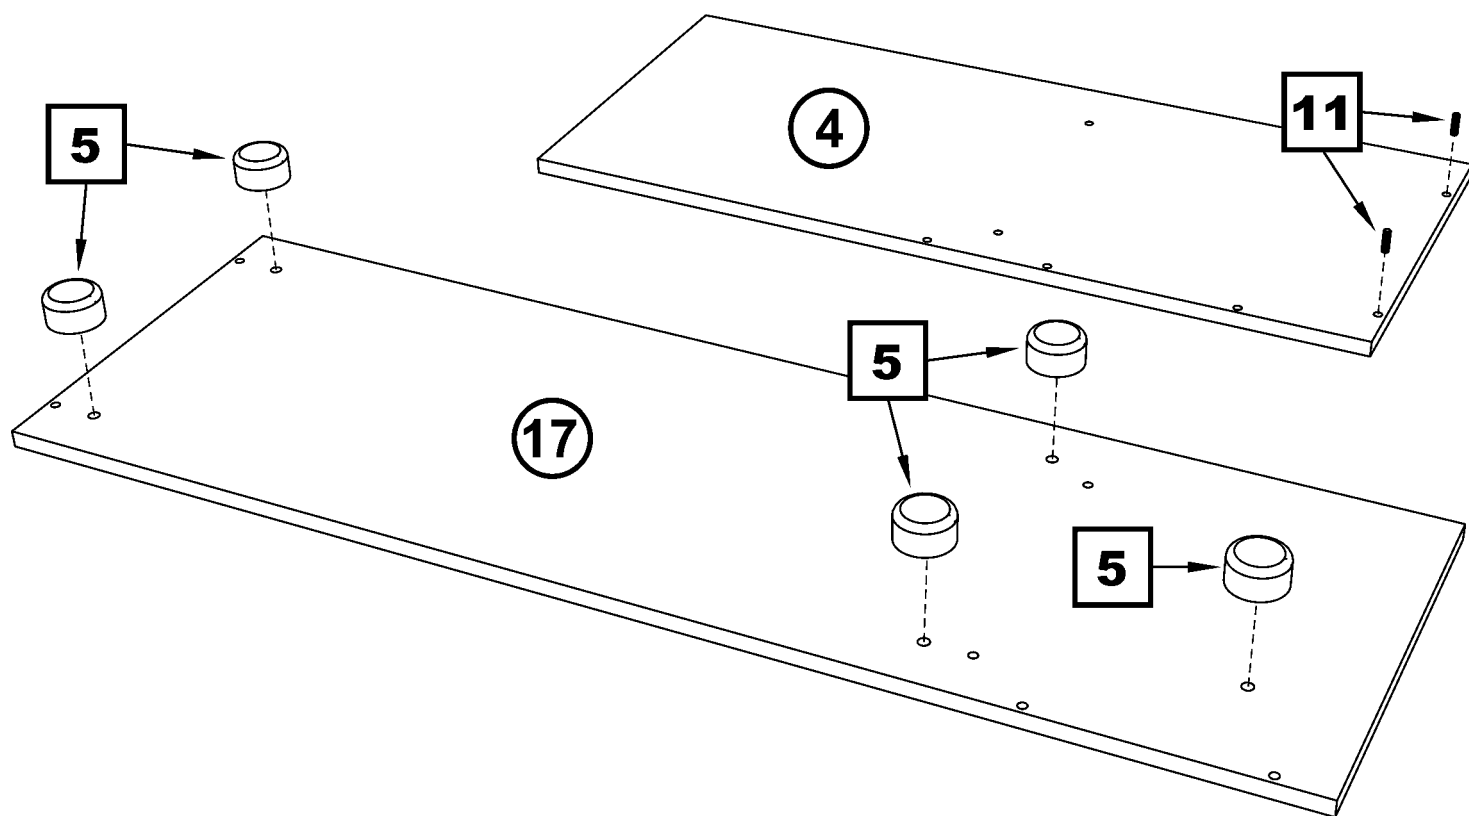

2

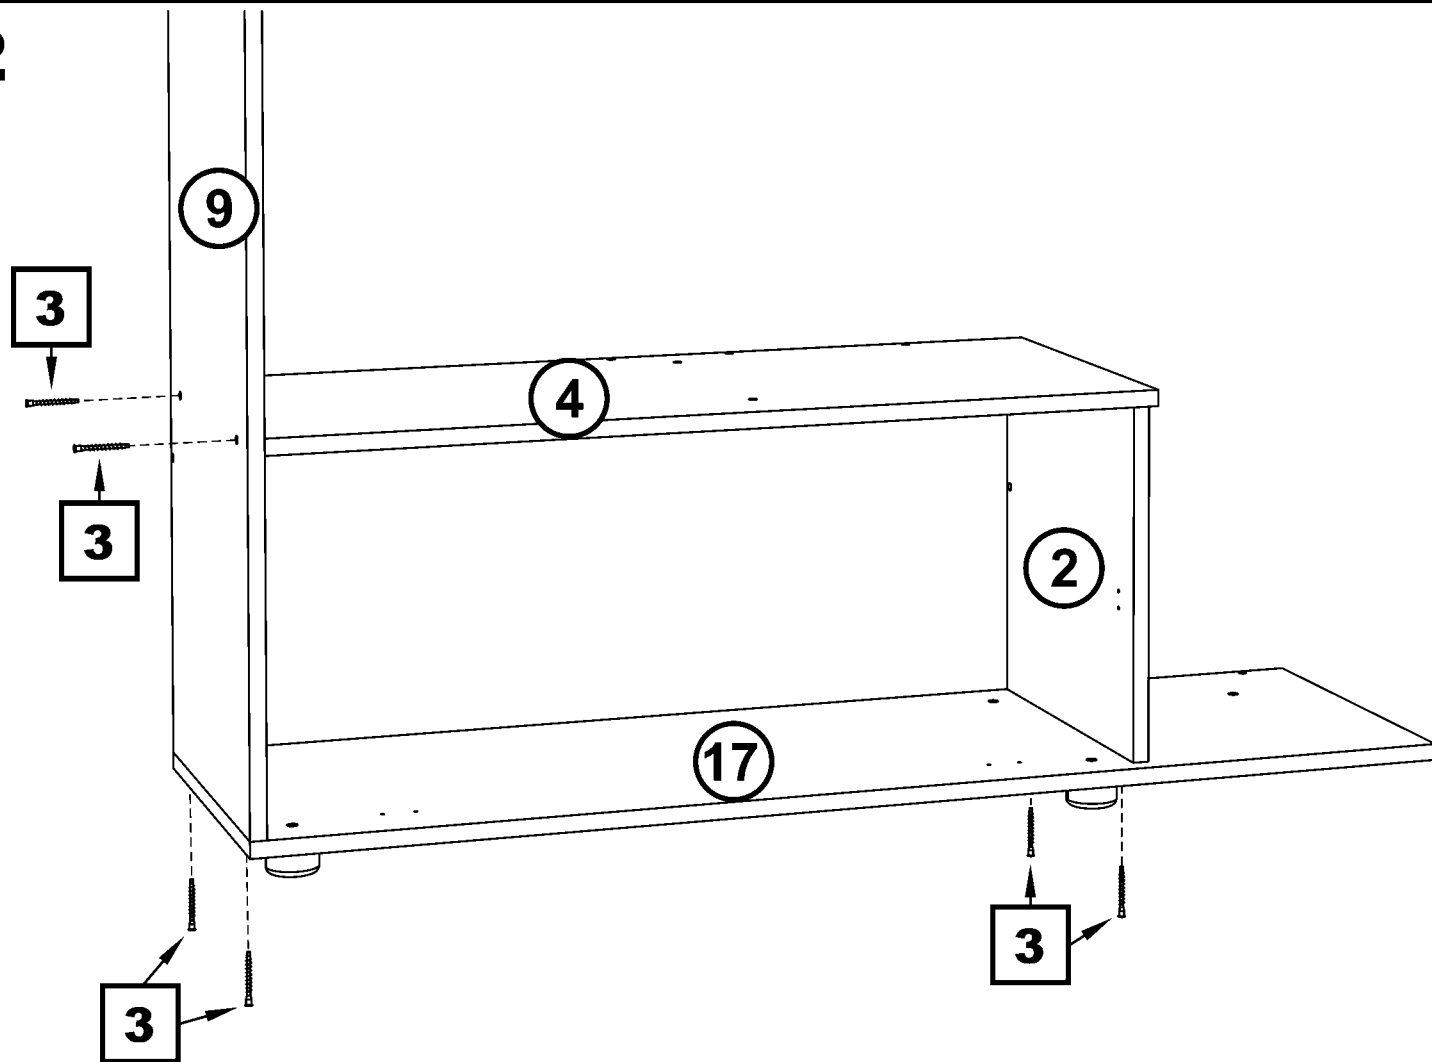


A line drawing of a three-door wardrobe. Numbered circles and squares with arrows indicate where to insert screws:


- 1**: Top left corner of the wardrobe body.
- 3**: Top edge of the wardrobe body, at the top of each door frame.
- 3**: Middle of the right door panel.
- 5**: Bottom of the middle door frame.
- 3**: Bottom edge of the wardrobe body, at the bottom of each door frame.
- 3**: Bottom left corner of the wardrobe body.

This diagram shows an exploded perspective view of a cabinet assembly. The main body is a tall rectangular frame. Three shelves are shown below the main body, with callout 12 pointing to the middle shelf. Three drawers are shown below the shelves, with callout 3 pointing to the front panel of the middle drawer. Callout 3 also points to the side panels of the main body and the bottom panel of the cabinet.



5

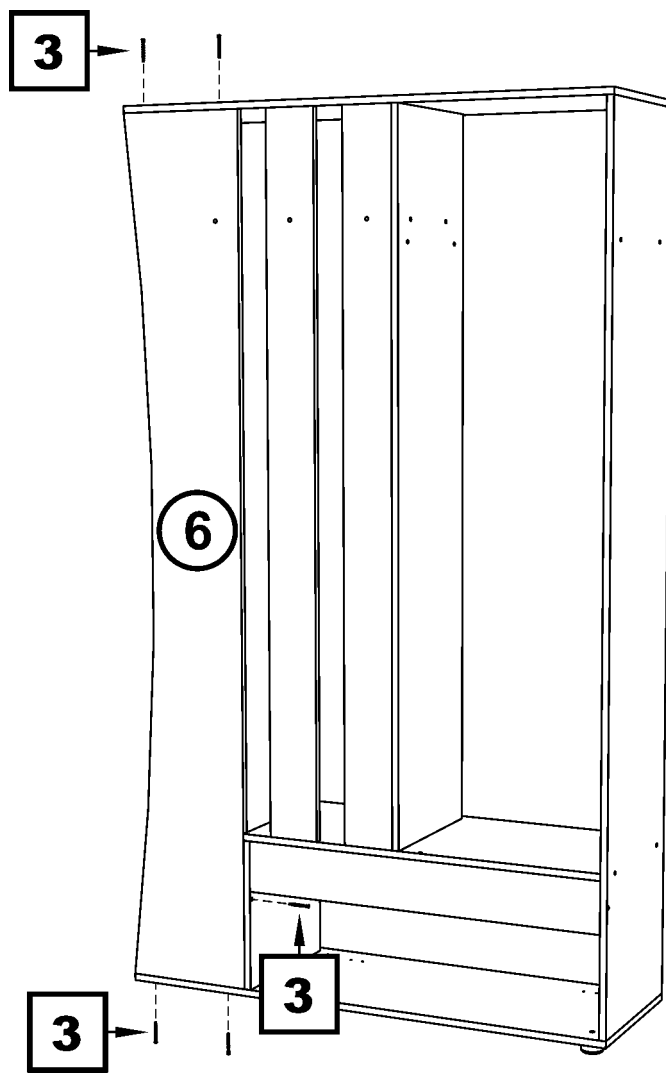


6

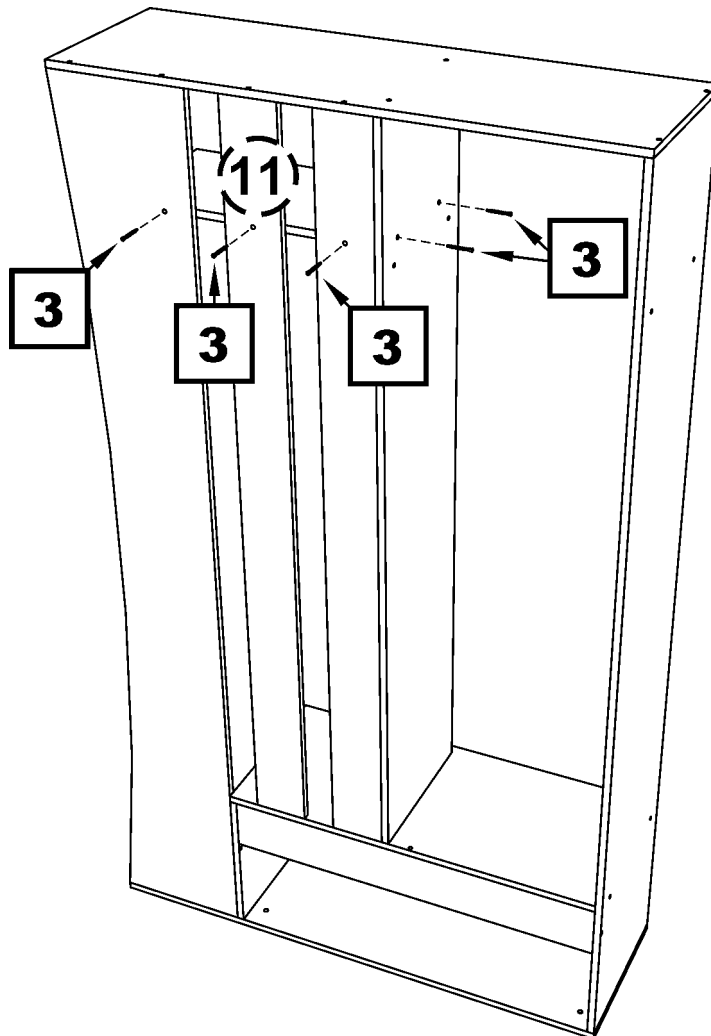


7

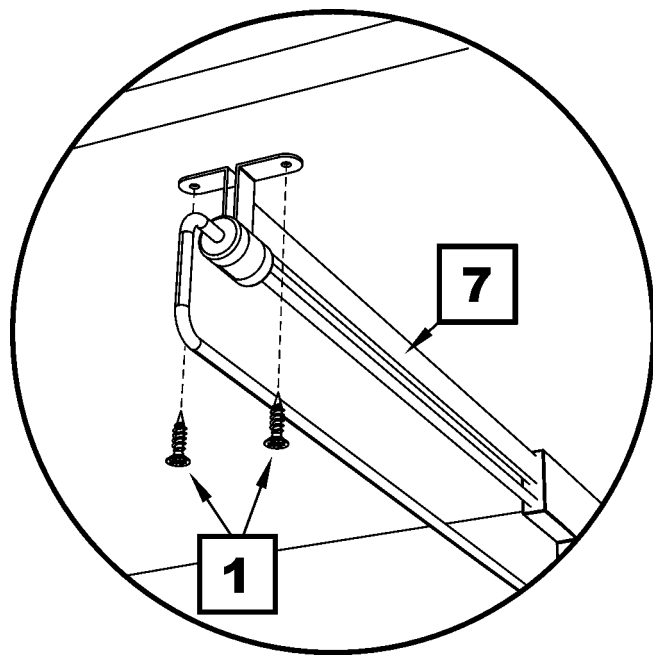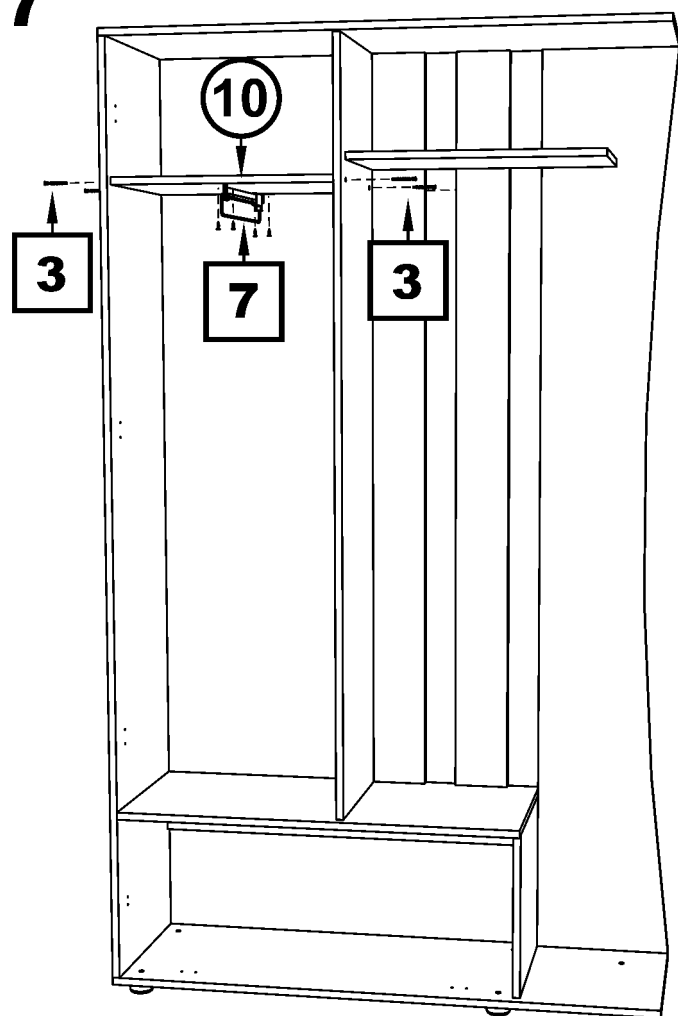




8

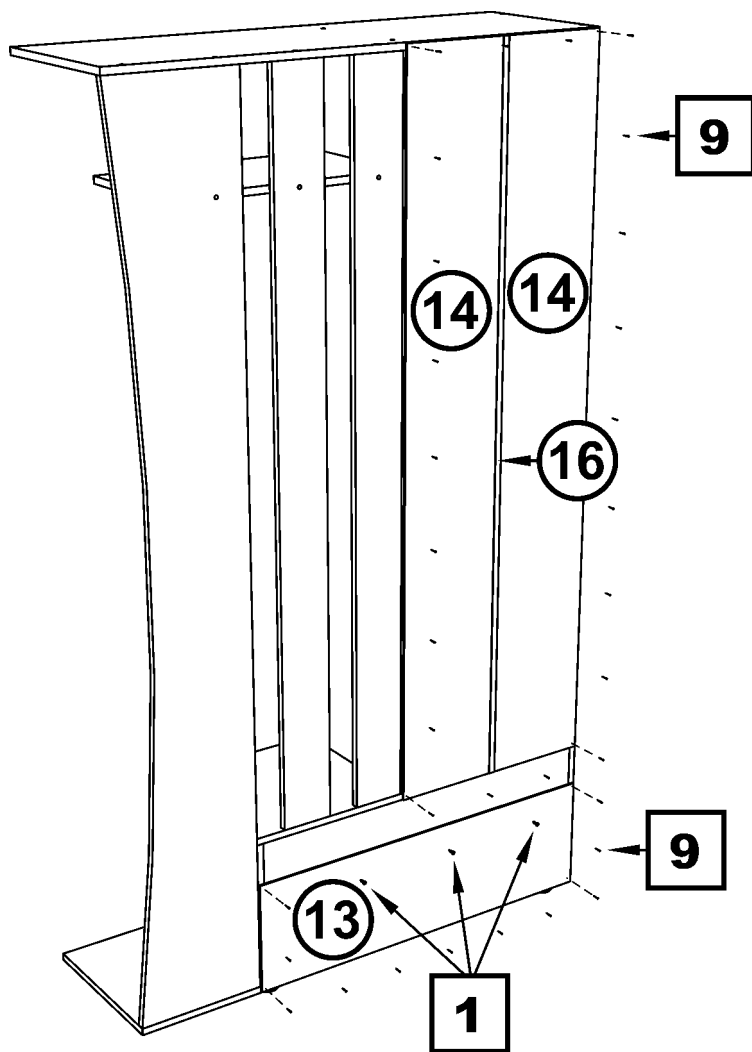

9

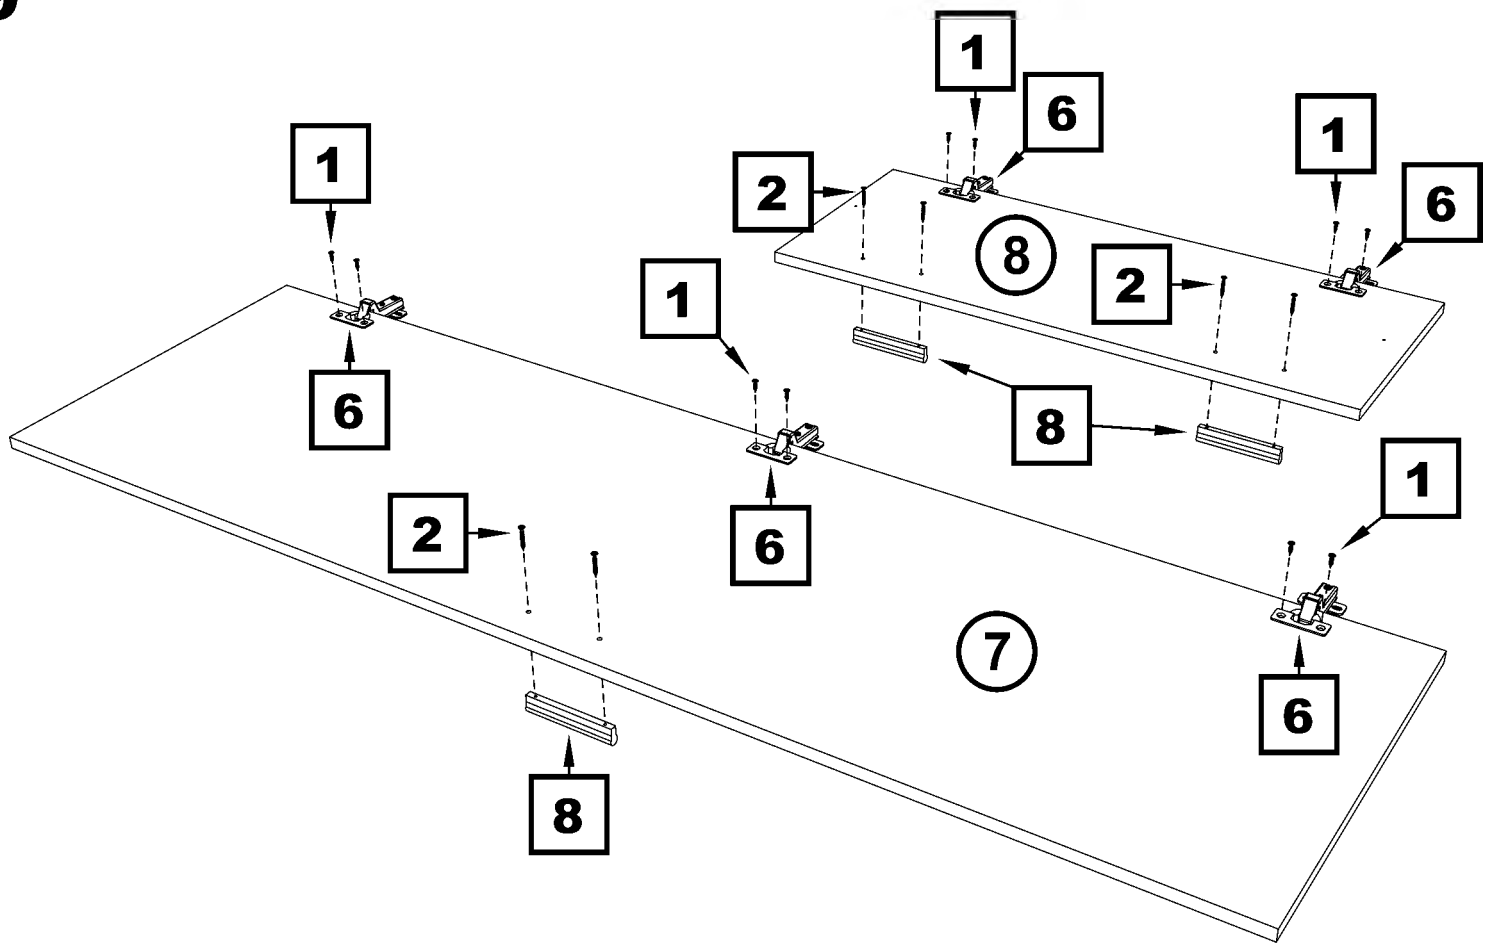

10

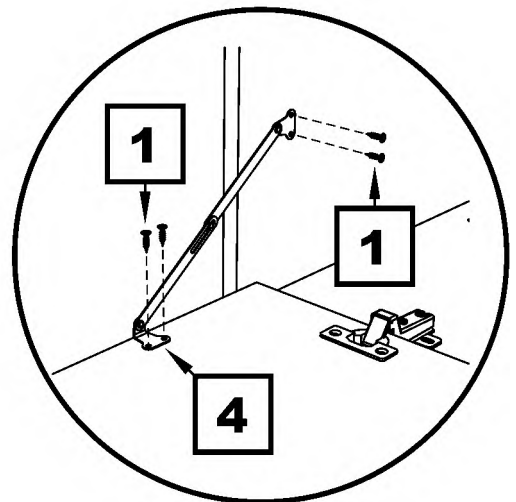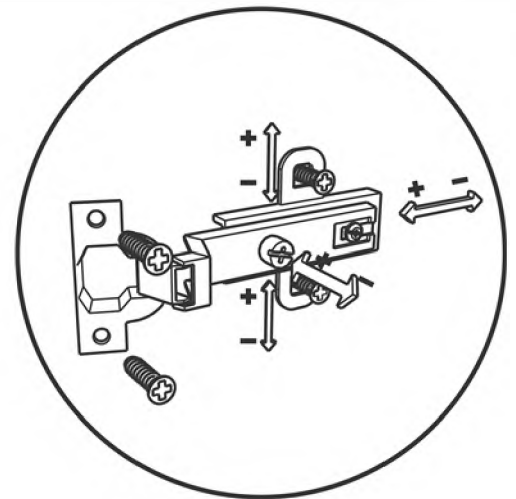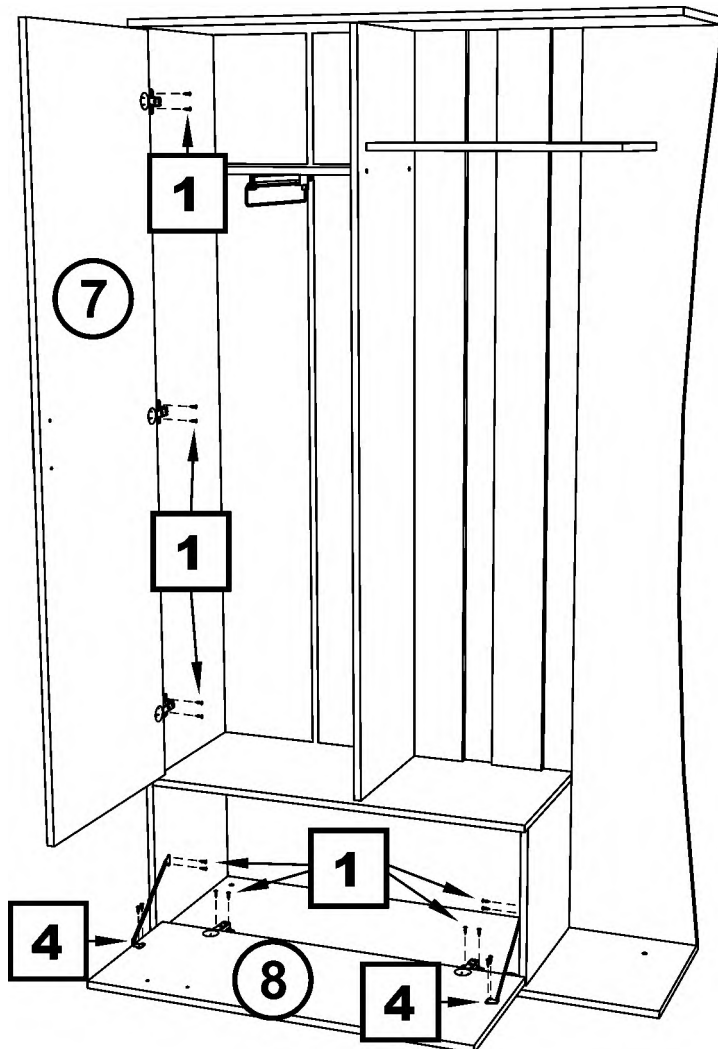

11

